

GPS Engine Board

EM-318-01

Globalsat Technology Corporation

16F., No. 186, Jian-Yi Road, Chung-Ho City, Taipei Hsien 235, Taiwan
Tel: 886-2-8226-3799/ Fax: 886-2-8226-3899
service@globalsat.com.tw
www.globalsat.com.tw

USGlobalSat, Inc.

14740 Yorba Court, Chino, CA 91710
Tel: 909.597.8525 / Fax: 909.597.8532
oem@usglobalsat.com
www.usglobalsat.com

Product Information

■ Product Part I.D. **EM-318-01**

■ Product Description:

EM-318-01 is a compact, high performance, and low power consumption GPS engine board. The EM-318-01 uses SiRF's GSC3f/LP chipset, which can track up to 20 satellites at a time and perform fast TTFF in low signal environments. It is suitable for portable electronic devices such as automotive navigation devices, handheld navigation devices, mobile phones, and other GPS applications.

■ Product Features:

- ✓ SiRF GSC3f/LP chipset
- ✓ 20 parallel channels
- ✓ Extremely fast TTFFs at low signal levels
- ✓ 1 serial ports
- ✓ Built-in LNA (*with built-in on-board patch antenna*)
- ✓ NMEA 0183 v3.01 (Default:GGA,GSA,GSV,RMC) SiRF NMEA Command
- ✓ SBAS (WAAS and EGNOS and MSAS) support
- ✓ ARM 7 TDML microprocessor
- ✓ RoHS compliant

■ Product Specifications

GPS Receiver	
Chipset	SiRF Star III/FLP Single
Frequency	L1, 1575.42 MHz
Code	C/A Code
Protocol	NMEA 0183 v2.2 Default:GGA,GSA,GSV,RMC Support:VTG,GLL,ZDA) SiRF binary and NMEA Command
Serial I/O Port	1UART Ports
Available Baud Rate	4800/9600/14400/19200/38400/57600
Channels	20
Flash	4Mbit
Sensitivity	Tracking:-159dBm
Cold Start	42 seconds average

Warm Start	38 seconds average
Hot Start	1 second average
Reacquisition	0.1 second average
Accuracy	Position: 10 meters, 2D RMS 5 meters, 2D RMS, WAAS enabled Velocity: 0.1 m/s Time: 1us synchronized to GPS time
Maximum Altitude	18,000 meter
Maximum Velocity	515 meter/second
Maximum Acceleration	4G
Update Rate	1 Hz
SBAS	WAAS, EGNOS, MSAS
Interface	
I/O Connector Type	10-pin Molex Micro-Miniature (1.25mm)
External Antenna Port	MMCX
Physical Characteristic	
Dimensions	1.2" x 1.2" x 0.37 (30 x 30 x 9.5 mm)
DC Characteristics	
Power Supply	3.3V ~ 5.5V $\pm$ 5%
Backup Voltage	2.0 ~ 3.6V
Power Consumption	Tracking: 45mA
Environmental Range	
Humidity Range	5% to 95% non-condensing
Operation Temperature	-22F to 185F (-30C to 85C)
Storage Temperature	-40F to 257F (-40C to 125C)

Recommended GPS Active Antenna Specifications

Frequency: 1575.42±2 MHz

Axial Ratio: 3 dB Typical

Output Impedance: 50Ω

Polarization: RHCP


Amplifier Gain :18~22dB Typical

Output VSWR: 2.0 Max.



Noise Figure: 2.0 dB Max.

2. Technical Information

■ Block Diagram

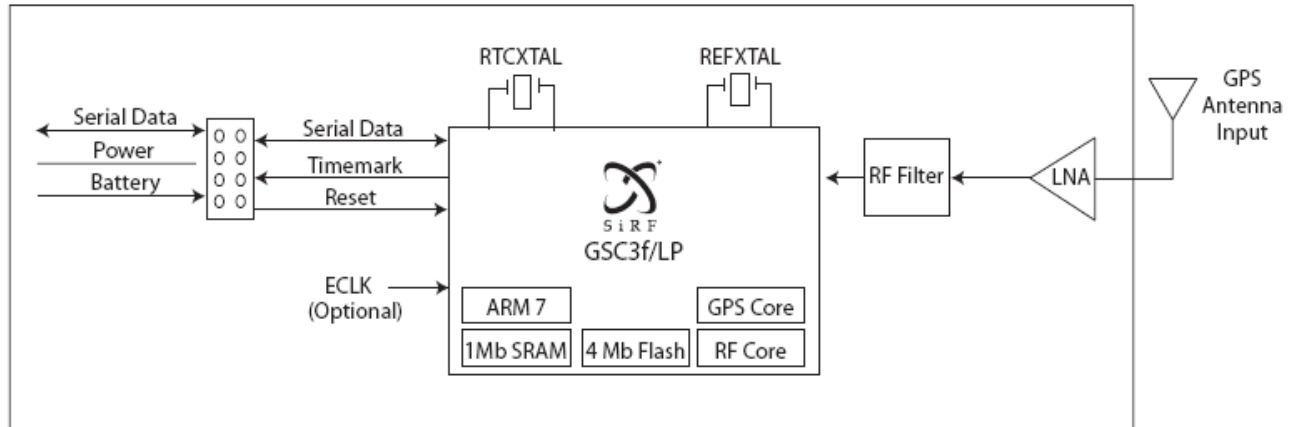


Pin Assignment

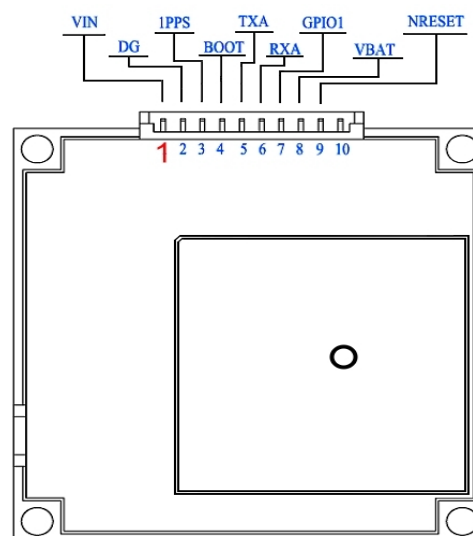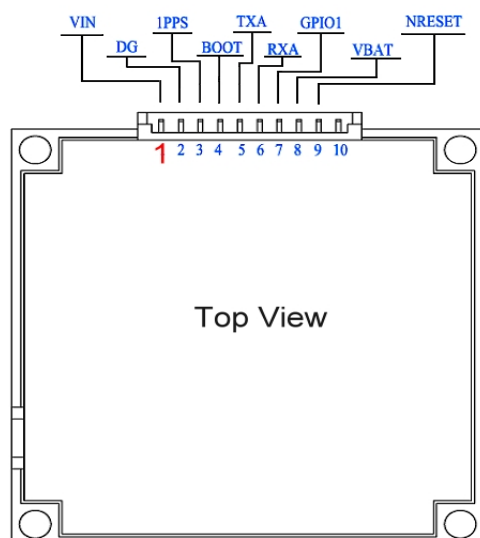

Pin #	Name	Description
1	VCC_IN	DC Supply Voltage input
2	GND	Analog Ground
3	1PPS	One Pulse per second output synchronized to GPS time. Not available in trickle mode.
4	BOOTSEL	Boot mode – set high to program flash
5	TXA	Serial output for channel
6	RXA	Serial input for channel
7	GPIO1	GPS Fix status output
8	VBAT	Backup voltage supply This is the battery backup input that powers the SRAM and RTC when main power is removed. Typical current draw is 15uA. Without an external backup power supply, the GPS module/engine board will execute a cold star upon each power-up. To achieve the faster start-ups a backup must be connected to this pin (battery or Gold /Super capacitor). The voltage should be between 2.0v and 5.0v. (NOTE: The VBAT pin must be kept “ HIGH ” for in order for the GPS board/module to function if no backup power is going to be used. From the VCC, connect a 470 Ohm ¼ Watt resistor in series with a 3.2v Zener diode to Ground. Connect the VBAT pin to the Zener’s cathode to pull the input “ HIGH ”.)
9	NRESET	Reset Input (Active Low)
10	NC	Not connect

Molex Micro-Miniature 1.25mm Connectors

Fig. 1 – 1.25mm Receptacle Housing

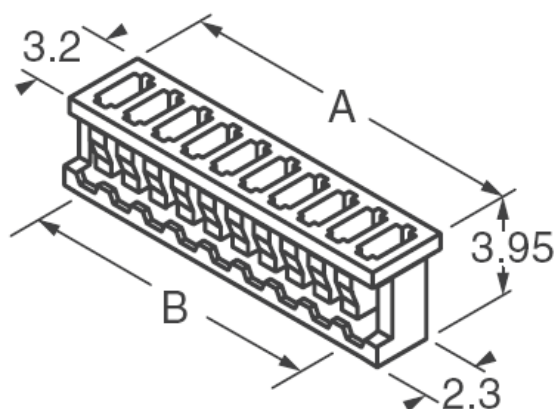

10-Pin Connector


Digi-Key Part No:

WM1728-ND

Molex Part No:

51021-1000

Fig. 6 – Crimp Terminal (Female)

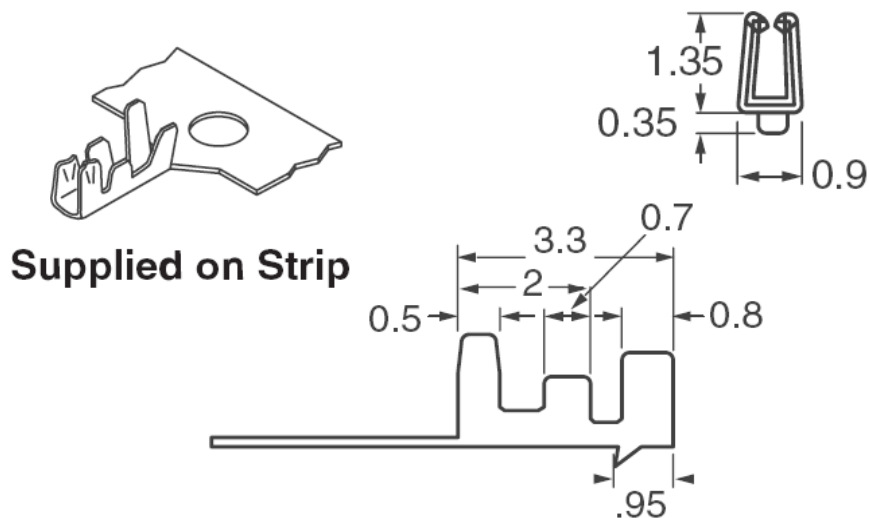

28-32 AWG Crimp

Digi-Key Part No:


WM1775-ND

WM1775TR-ND

Molex Part No:

50058-8000

■ Dimensions

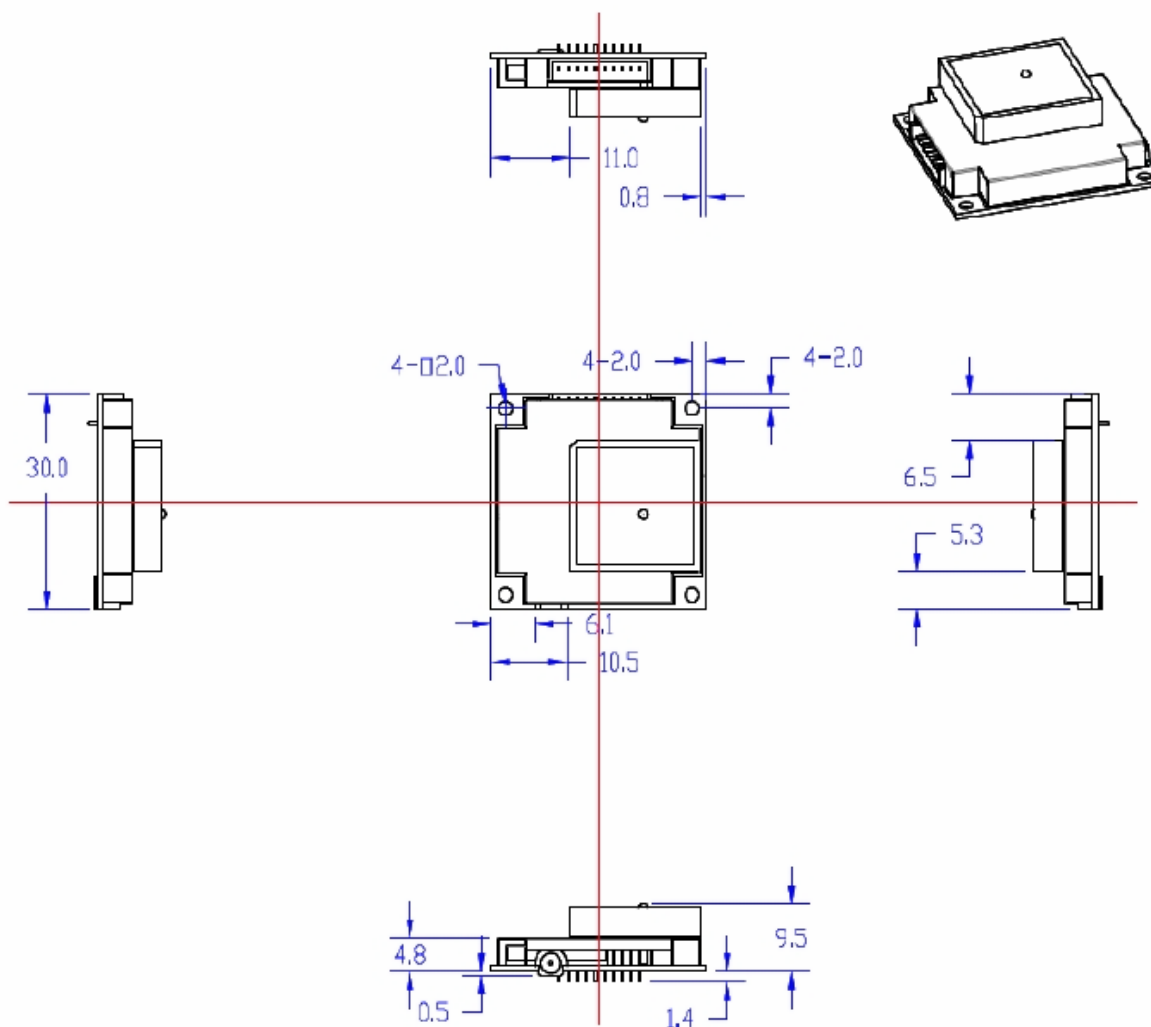

3. SOFTWARE COMMAND

■ NMEA Output Command

GGA-Global Positioning System Fixed Data

Table B-2 contains the values for the following example:

\$GPGGA,161229.487,3723.2475,N,12158.3416,W,1,07,1.0,9.0,M,,,0000*18

Table B-2 GGA Data Format

Name	Example	Units	Description
Message ID	\$GPGGA		GGA protocol header
UTC Time	161229.487		hhmmss.sss
Latitude	3723.2475		ddmm.mmmm
N/S Indicator	N		N=north or S=south
Longitude	12158.3416		dddmm.mmmm
E/W Indicator	W		E=east or W=west
Position Fix Indicator	1		See Table B-3
Satellites Used	07		Range 0 to 12
HDOP	1.0		Horizontal Dilution of Precision
MSL Altitude ¹	9.0	meters	
Units	M	meters	
Geoid Separation ¹		meters	
Units	M	meters	
Age of Diff. Corr.		second	Null fields when DGPS is not used
Diff. Ref. Station ID	0000		
Checksum	*18		
<CR><LF>			End of message termination

SiRF Technology Inc. does not support geoid corrections. Values are WGS84 ellipsoid heights.

Table B-3 Position Fix Indicator

Value	Description
0	Fix not available or invalid
1	GPS SPS Mode, fix valid
2	Differential GPS, SPS Mode , fix valid
3	GPS PPS Mode, fix valid

GLL-Geographic Position-Latitude/Longitude

Table B-4 contains the values for the following example:

\$GPGLL,3723.2475,N,12158.3416,W,161229.487,A*2C

Table B-4 GLL Data Format

Name	Example	Units	Description
Message ID	\$GPGLL		GLL protocol header
Latitude	3723.2475		ddmm.mmmm
N/S Indicator	n		N=north or S=south
Longitude	12158.3416		dddmm.mmmm
E/W Indicator	W		E=east or W=west
UTC Position	161229.487		hhmmss.sss
Status	A		A=data valid or V=data not valid
Checksum	*2C		
<CR><LF>			End of message termination

GSA-GNSS DOP and Active Satellites

Table B-5 contains the values for the following example:

\$GPGSA,A,3,07,02,26,27,09,04,15,,,,,1.8,1.0,1.5*33

Table B-5 GSA Data Format

Name	Example	Units	Description
Message ID	\$GPGSA		GSA protocol header
Mode1	A		See Table B-6
Mode2	3		See Table B-7
Satellite Used ¹	07		Sv on Channel 1
Satellite Used ¹	02		Sv on Channel 2
.			
Satellite Used ¹			Sv on Channel 12
PDOP	1.8		Position dilution of Precision
HDOP	1.0		Horizontal dilution of Precision
VDOP	1.5		Vertical dilution of Precision
Checksum	*33		
<CR><LF>			End of message termination

1. Satellite used in solution.

Table B-6 Mode1

Value	Description
M	Manual-forced to operate in 2D or 3D mode
A	2D automatic-allowed to automatically switch 2D/3D

Table B-7 Mode 2

Value	Description
1	Fix Not Available
2	2D
3	3D

GSV-GNSS Satellites in View

Table B-8 contains the values for the following example:

\$GPGSV,2,1,07,07,79,048,42,02,51,062,43,26,36,256,42,27,27,138,42*71

\$GPGSV,2,2,07,09,23,313,42,04,19,159,41,15,12,041,42*41

Table B-8 GSV Data Format

Name	Example	Units	Description
Message ID	\$GPGSV		GSV protocol header
Number of Messages ¹	2		Range 1 to 3
Message Number ¹	1		Range 1 to 3
Satellites in View	07		
Satellite ID	07		Channel 1(Range 1 to 32)
Elevation	79	degrees	Channel 1(Maximum90)
Azimuth	048	degrees	Channel 1(True, Range 0 to 359)
SNR(C/No)	42	dBHz	Range 0 to 99,null when not tracked
.....			
Satellite ID	27		Channel 4 (Range 1 to 32)
Elevation	27	Degrees	Channel 4(Maximum90)
Azimuth	138	Degrees	Channel 4(True, Range 0 to 359)
SNR(C/No)	42	dBHz	Range 0 to 99,null when not tracked
Checksum	*71		
<CR><LF>			End of message termination

Depending on the number of satellites tracked multiple messages of GSV data may be required.

RMC-Recommended Minimum Specific GNSS Data

Table B-9 contains the values for the following example:

\$GPRMC,161229.487,A,3723.2475,N,12158.3416,W,0.13,309.62,120598,,*10

Table B-9 RMC Data Format

Name	Example	Units	Description
Message ID	\$GPRMC		RMC protocol header
UTC Time	161229.487		hhmmss.sss
Status	A		A=data valid or V=data not valid
Latitude	3723.2475		ddmm.mmmm
N/S Indicator	N		N=north or S=south
Longitude	12158.3416		dddmm.mmmm
E/W Indicator	W		E=east or W=west
Speed Over Ground	0.13	knots	
Course Over Ground	309.62	degrees	True
Date	120598		ddmmyy
Magnetic Variation ²		degrees	E=east or W=west
Checksum	*10		
<CR><LF>			End of message termination

SiRF Technology Inc. does not support magnetic declination. All “course over ground” data are Geodetic WGS48 directions.

VTG-Course Over Ground and Ground Speed

\$GPVTG,309.62,T,,M,0.13,N,0.2,K*6E

Table B-9 VTG Data Format

Name	Example	Units	Description
Message ID	\$GPVTG		VTG protocol header
Course	309.62	degrees	Measured heading
Reference	T		True
Course		degrees	Measured heading
Reference	M		Magnetic
Speed	0.13	knots	Measured horizontal speed
Units	N		Knots
Speed	0.2	Km/hr	Measured horizontal speed
Units	K		Kilometers per hour
Checksum	*6E		
<CR><LF>			End of message termination

ZDA—PPS timing message (synchronized to PPS)

Outputs the time associated with the current 1 PPS pulse. Each message is output within a few hundred ms after the 1 PPS pulse is output and tells the time of the pulse that just occurred

Table B-10 contains the values for the following example:

\$GPZDA,181813,14,10,2003,00,00*4F

Table B-10 ZDA Data Format

Name	Example	Units	Description
Message ID	\$GPZDA		ZDA protocol header
UTC time	181813		Either using valid IONO/UTC or estimated from default leap seconds
Day	14		01 TO 31
Month	10		01 TO 12
Year	2003		1980 to 2079
Local zone hour	00	knots	Offset from UTC(set to 00)
Local zone minutes	00		Offset from UTC(set to 00)
Checksum			
<CR><LF>			End of message termination

■ NMEA Input Command

A.) Set Serial Port ID:100 Set PORTA parameters and protocol

This command message is used to set the protocol (SiRF Binary, NMEA, or USER1) and/or the communication parameters (baud, data bits, stop bits, parity). Generally, this command is utilized to switch the GPS module back to SiRF Binary protocol mode, where an extensive message commands are readily available. In example, whenever users are interested in altering navigation parameters, a valid message sent and is received by the recipient module, the new parameters will be stored in battery backed SRAM and then the receiver will restart using the saved parameters.

Format:

\$PSRF100,<protocol>,<baud>,<DataBits>,<StopBits>,<Parity>*CKSUM
<CR><LF>

<protocol>	0=SiRF Binary, 1=NMEA, 4=USER1
<baud>	1200, 2400, 4800, 9600, 19200, 38400
<DataBits>	8,7. Note that SiRF protocol is only valid for 8 Data bits
<StopBits>	0,1
<Parity>	0=None, 1=Odd, 2=Even

Example 1: Switch to SiRF Binary protocol at 9600,8,N,1

\$PSRF100,0,9600,8,1,0*0C<CR><LF>

Example 2: Switch to User1 protocol at 38400,8,N,1

\$PSRF100,4,38400,8,1,0*38<CR><LF>

****Checksum Field:** The absolute value calculated by exclusive-OR the 8 data bits of each character in the Sentence, between, but, excluding “\$” and “*”. The hexadecimal value of the most significant and least significant 4 bits of the result are converted to two ASCII characters (0-9,A-F) for transmission. First, the most significant character is transmitted.

****<CR><LF>** : Hex 0D 0A

B.) Navigation initialization ID:101 Parameters required for start

This command is used to initialize the GPS module for a “Warm” start, by providing real-time position (in X, Y, Z coordinates), clock offset, and time. This action enables the GPS receiver to search for the necessary satellite signals at the correct signal parameters. The newly acquired and stored satellite data will enable the receiver to acquire signals more quickly, and thus, generate a rapid navigational solution.

When a valid Navigation Initialization command is receive, the receiver will restart using the input parameters as a basis for satellite selection and acquisition.

Format

\$PSRF101,<X>,<Y>,<Z>,<ClkOffset>,<TimeOfWeek>,<WeekNo>,<chnlCount>,<ResetCfg>

*CKSUM<CR><LF>

<X>	X coordinate position INT32
<Y>	Y coordinate position INT32
<Z>	Z coordinate position INT32
<ClkOffset>	Clock offset of the receiver in Hz, Use 0 for last saved value if available. If this is unavailable, a default value of 75000 for GSP1, 95000 for GSP 1/LX is used. INT32
<TimeOf Week>	GPS Time Of Week UINT32
<WeekNo>	GPS Week Number UINT16 Week No and Time Of Week calculation from UTC time
<chnlCount>	Number of channels to use.1-12. If your CPU throughput is not high enough, you could decrease needed throughput by reducing the number of active channels UBYTE
<ResetCfg>	bit mask 0x01=Data Valid warm/hotstarts=1 0x02=clear ephemeris warm start=1 0x04=clear memory. Cold start=1 UBYTE

Example: Start using known position and time.

\$PSRF101,-2686700,-4304200,3851624,96000,497260,921,12,3*7F

C.) Set DGPS Port ID:102 Set PORT B parameters for DGPS input

This command is used to control Serial Port B, an input serial only port used to receive RTCM differential corrections. Differential receivers may output corrections using different communication parameters. The default communication parameters for PORT B are set for 9600 Baud, 8data bits, 0 stop bits, and no parity. If a DGPS receiver is used which has different communication parameters, use this command to allow the receiver decode data correctly. When a valid message is received, the parameters are stored in a battery backed SRAM. Resulting, GPS receiver using the saved Parameters for restart.

Format:

\$PSRF102,<Baud>,<DataBits>,<StopBits>,<Parity>*CKSUM<CR><LF>

<baud>	1200,2400,4800,9600,19200,38400
<DataBits>	8
<StopBits>	0,1
<Parity>	0=None,Odd=1,Even=2

Example: Set DGPS Port to be 9600,8,N,1

\$PSRF102,9600,8,1,0*12

D.) Query/Rate Control ID:103 Query standard NMEA message and/or set output rate

This command is used to control standard NMEA data output messages: GGA, GLL, GSA, GSV, RMC, and VTG. Using this command message, standard NMEA message is polled once, or setup for periodic output. In addition, checksums may also be enable or disable contingent on receiving program requirements. NMEA message settings are stored in a battery-backed memory for each entry when the message is accepted.

Format:

\$PSRF103,<msg>,<mode>,<rate>,<cksumEnable>*CKSUM<CR><LF>

<msg>	0=GGA,1=GLL,2=GSA,3=GSV,4=RMC,5=VTG
<mode>	0=SetRate,1=Query
<rate>	Output every <rate>seconds, off=0,max=255
<cksumEnable>	0=disable Checksum,1=Enable checksum for specified message

Example 1: Query the GGA message with checksum enabled

\$PSRF103,00,01,00,01*25

Example 2: Enable VTG message for a 1Hz constant output with checksum enabled

\$PSRF103,05,00,01,01*20

Example 3: Disable VTG message

\$PSRF103,05,00,00,01*21

E.) LLA Navigation initialization ID:104 Parameters required to start using Lat/Lon/Alt

This command is used to initialize the GPS module for a “Warm” start, providing real-time position (Latitude, Longitude, Altitude coordinates), clock offset, and time. This action enables the GPS receiver to search for the necessary satellite signals at the correct signal parameters. The newly acquired and stored satellite data will enable the receiver to acquire signals more quickly, and thus, generate a rapid navigational solution.

When a valid LLA Navigation Initialization command is received, then the receiver will restart using the input parameters as a basis for satellite selection and acquisition.

Format:

\$PSRF104,<Lat>,<Lon>,<Alt>,<ClkOffset>,<TimeOfWeek>,<WeekNo>,<ChannelCount>,<ResetCfg>*CKSUM<CR><LF>

<Lat>	Latitude position, assumed positive north of equator and negative south of equator float, possibly signed
<Lon>	Longitude position, it is assumed positive east of Greenwich and negative west of Greenwich Float, possibly signed
<Alt>	Altitude position float, possibly signed
<ClkOffset> available.	Clock Offset of the receiver in Hz, use 0 for last saved value if available. If this is unavailable, a default value of 75000 for GSP1, 95000 for GSP1/LX is used.
<TimeOfWeek>	INT32 GPS Time Of Week
<WeekNo>	UINT32 GPS Week Number
<ChannelCount>	UINT16 Number of channels to use. 1-12
<ResetCfg>	UBYTE bit mask 0x01=Data Valid warm/hot starts=1 0x02=clear ephemeris warm start=1 0x04=clear memory. Cold start=1 UBYTE

Example: Start using known position and time.

\$PSRF104,37.3875111,-121.97232,0,96000,237759,922,12,3*37

F.) Development Data On/Off ID:105 Switch Development Data Messages On/Off

Use this command to enable development debug information if you are having trouble in attaining commands accepted. Invalid commands will generate debug information that should enable the user to determine the source of the command rejection. Common input rejection problems are associated to invalid checksum or parameter out of specified range. Note, this setting is not preserved across a

module reset.

Format: \$PSRF105,<debug>*CKSUM<CR><LF>

<debug> 0=Off,1=On

Example: Debug On \$PSRF105,1*3E

Example: Debug Off \$PSRF105,0*3F

G). Select Datum ID:106 Selection of datum to be used for coordinate transformations

GPS receivers perform initial position and velocity calculations using an earth-centered earth-fixed (ECEF) coordinate system. Results may be converted to an earth model (geoid) defined by the selected datum. The default datum is WGS 84 (World Geodetic System 1984) which provides a worldwide common grid system that may be translated into local coordinate systems or map Datum. (Local map Datum are a best fit to the local shape of the earth and not valid worldwide.)

Examples:

Datum select TOKYO_MEAN

\$PSRF106,178*32

Name	Example	Units	Description
Message ID	\$PSRF106		PSRF106 protocol header
Datum	178		21= WGS84 178= Tokyo_Mean 179= Tokyo_Japan 180= Tokyo_Korea 181= Tpkyo_Okinawa
Checksum	*32		
<CR><LF>			End of message termination

* * *